



No Tools required

**PARTS LIST**

- Your kit contains:
- 1 Left and 1 Right Saddlebag.
  - 1 Bottle Conditioner Oil
  - 2 Removable Pouches
  - 1 Set Keys
  - 2 Rain Bonnets

**NOTE:** To install the Ztechnik Leather Bags to your motorcycle you must have BMW mount kit Part No. 70-160-7-651-481 installed.  
Right and Left side of Motorcycle is determined while sitting on the bike.

Your key set is numbered. For replacement purpose record your Key Set Number Here: \_\_\_\_\_

**PREPARATION**

1. Position the motorcycle securely on its side stand.
2. Before installing your saddlebag(s) apply the Pro-F-I oil to protect your bags from moisture and dirt.

**Leather Dressing Bottle Label**

**Front:**


Pro-F-I Leather-dressing.  
Value preserving waterproofing.  
Maintains and nutrients leather from the inside.

**Back:**

Do not eat!  
Genuine,natural,precious leather-dressing oil for waterproofing.  
Dresses, cleans and protects: Leather riding gear, shoes, boots, cases, bags, furniture, car seats.  
Made of Nappa-Leather.  
Put on thin and thrifty!



## *Left Bag, lock in open position*

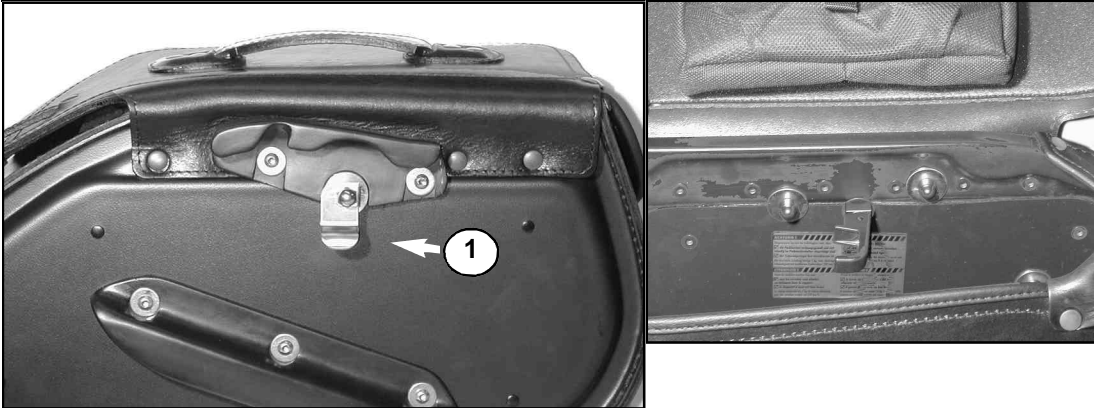

## *Left Bag, lock in closed position*



### **INSTALLATION**

1. While lock is in open position, install the bag over the BMW mount rail.
2. Turn lock to closed position. Check to see that bag is secured to rail. Close lever on inside.

### **MAINTENANCE**

Periodically clean and protect your bags against moisture with an application of the Pro-F1 leather dressing or similar product.

#### **Products available through motorcycle dealers are:**

LEXOL® Leather Cleaner  
LEXOL® Leather Conditioner

IFW Leather Cleaner/ Conditioner  
IFW Leather Water Repellent